

 


Thank you very much for applying for Mimamori Tag.
The subscription details and other information are shown below. If you have any question,
please contact Mimamori Tag Inquiries Desk.
Tel: 0120-50-5556 (24-hour support every day of the year)

Mimamori Tag Instructions

- This equipment is designed for use in Japan only and cannot be used in any other country.
- Take care not to inconvenience people around you when using this product in a public place.
- ALSOK holds all copyrights regarding this document.
- Duplication of this document, in part or in whole, without the consent of ALSOK is prohibited, regardless of the media.
- Images, text, and other items contained in this document may differ from the actual product due to printing limitations.
- The content of this document is subject to change without notice.
- The content of this document was created with the utmost care. However, please contact ALSOK if you find anything unclear, mistakes, omissions, etc.

[Names and Functions of Parts]

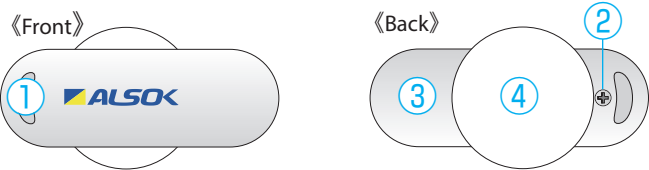

Name	Role
① Strap hole	Use this when using the product as a key holder.
② Battery replacement screw	The battery cover can be removed by loosening this screw.
③ Manufacturing number	Unique number of Mimamori Tag.
④ Battery cover	Remove this when replacing the battery.

[Product Specifications]

Maximum external dimensions	29.0 x 56.5 x 11.6 (mm)
Weight (including battery)	Approx. 14 g
Battery life	Approx. 1 year
Operating temperature	0 to 60 °C
Drip-proof performance	Equivalent to IPX4 (water resistant)
Battery used*	CR2450 coin lithium ion battery (Panasonic)

*The life of the battery is approximately 1 year.
Replace it at an interval of approximately 1 year.
Country of manufacture : Japan
Vendor : Sohgo Security Services Co.,Ltd.
Manufacturer : Access Co., Ltd.

Included Items

The package contains the following items. Check that they are all included.

This document (x1)		Document containing "Mimamori Tag Instructions," "Mimamori Tag Beginners' Guide."
Mimamori Tag (x1)		Mimamori Tag you purchased. Complete the initial registration while referring to "Mimamori Tag Beginners' Guide."
Battery (x1)		Battery for Mimamori Tag. The life of the battery is approximately 1 year. This battery is commercially available at stores and retailers so replace it at an interval of approximately 1 year.

[Safety Precautions]

Before use, read these "Safety Precautions" thoroughly to ensure correct use. Be sure to observe the precautions stated here to prevent harm and damage to the property and physical wellbeing of the user.

<Description of Displayed Symbols>

	WARNING	This indicates a matter that may lead to death, serious injury or physical damage if incorrectly handled.
	CAUTION	This indicates a matter that may lead to injury or physical damage if incorrectly handled.
	REQUEST	This indicates a matter that will lead to an inability to exhibit the expected performance or a function becoming unable to be used if incorrectly handled.

	This indicates a prohibited action.
	This indicates a compulsory action.

WARNING	
	Never dismantle or modify Mimamori Tag.
	Do not use a battery for which the usage period has expired or an old battery. There is a risk of rupture.
	When disposing of a battery, dispose of it in the prescribed way. When disposing or storing a battery, wrap tape or the like around the battery to isolate it.
	If battery fluid gets in an eye or on your body, rinse it off with water and consult a doctor immediately.
	Insert a battery with the correct polarity. Making a mistake may result in fluid leaking or rupture.
	Do not put a battery in a fire. Also, do not short, dismantle, deform, or charge a battery. Doing so may cause fluid leakage, heat generation, fire, or rupture.
	Place a removed battery out of the reach of infants and small children. If it is accidentally swallowed, immediately contact a doctor and ask what to do.
	When the battery is depleted or Mimamori Tag will not be used for a while, remove the battery. Leaving it as is may result in fluid leaking or rupture.
	Do not place Mimamori Tag in a place within the reach of infants. Ensure that it is not licked, placed in a mouth, or swallowed. If it is accidentally swallowed, immediately contact a doctor and ask what to do.
	Do not use Mimamori Tag in an aircraft.

CAUTION	
	Do not place Mimamori Tag in a place exposed to direct sunlight or high humidity. Doing so may cause the temperature inside Mimamori Tag to rise, resulting in a fire or failure.
	Do not stand or place a heavy object on Mimamori Tag or place it on an unsafe tilted surface. Doing so may cause it to fall or drop, resulting in damage or injury. Exercise particular caution in homes with small children.

REQUEST	
Use Mimamori Tag in a place where the ambient temperature is 0 °C to 60 °C.	
If drops of water get on Mimamori Tag, wipe them off immediately with a dry cloth or the like. Do not use Mimamori Tag while it is wet.	
Do not use benzine, thinner, alcohol, chlorine, or other chemical or an abrasive. Doing so may cause the discoloration or deformation of Mimamori Tag.	
Do not drop or subject Mimamori Tag to a strong impact. Doing so may cause a failure.	
Do not place Mimamori Tag close to the air outlet of an air conditioner. Doing so may cause a failure due to condensation resulting from sudden temperature changes, internal corrosion, etc.	
When replacing the battery, use the following battery. Recommended battery: Panasonic CR2450	
When replacing the battery, insert the battery according to the procedure in this document. If the battery is inserted in a way that differs from the procedure in this document, such as placing it in the cover side and then attaching the cover, Mimamori Tag may not operate normally.	
Do not place Mimamori Tag in a location where a magnetic field exists or electromagnetic waves are generated such as near an electrical appliance, audiovisual equipment, or office automation equipment (microwave oven, speaker, TV, radio, fax machine, fluorescent lamp, word processor, inverter air conditioner, induction cooker, etc.).	
Do not insert anything with a diameter of 3 mm or more through the strap hole. There is a risk of damage.	

How to Clean and Disinfect

When the product is very dirty, wipe it with a cloth that has been immersed in neutral detergent diluted with water or in lukewarm water (50 °C or less) and then thoroughly wrung out.
When disinfecting the product, use Saposute (Saraya Co.,Ltd.).
Do not clean, disinfect, or wash with water in any way other than the above.


Mimamori Tag Beginners' Guide

Read "Mimamori Tag Beginner's Guide" (this guide) and then use this product correctly. After reading, keep this document handy for future reference. This guide describes only the main operations and settings for using Mimamori Tag.


For the detailed operating procedures, refer to [Mimamori Tag App Instructions] on the Help screen of the Mimamori Tag app.

Step 1 Insert the battery into Mimamori Tag.


- 1 Loosen the battery replacement screw with a Phillips screwdriver and then remove the battery cover.

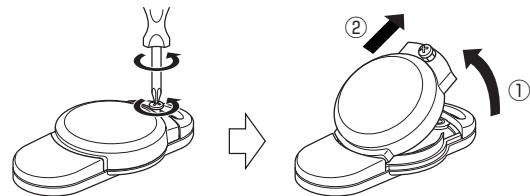

- 2 With the plus side of the supplied battery facing upward, insert the battery while aligning it with the battery terminal. (When replacing the battery, purchase a CR2450 coin lithium ion battery (Panasonic) at a nearby retailer.) After replacement, perform a signal check with the tag detection test of step 5.

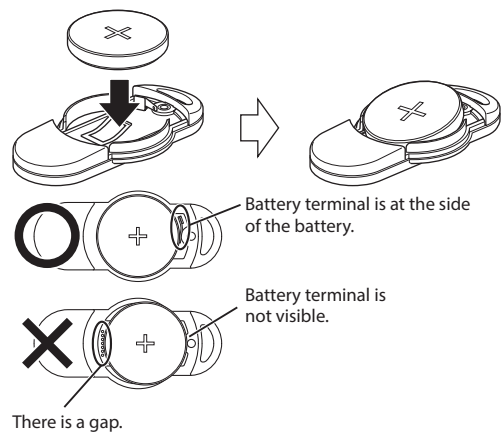

- 3 Close the battery cover and then tighten the battery replacement screw until it no longer turns.

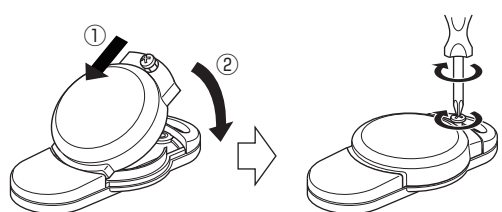

Step 2 Download the Mimamori Tag app (free).



* Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.



* Android, Google Play, and the Google Play logo are trademarks of Google Inc.
<Reference> If you need to log in from a PC, use the ALSOK Mimamori Tag Service website.
<https://mimamori.alsok.co.jp/guardian-web/login>

Step 3 Start the Mimamori Tag app.

 
When step 2 completes, the Mimamori Tag app icon appears on the Home screen of your smartphone or other device. Tap the icon to start the Mimamori Tag app.



Step 4 Follow the guidance to complete the initial registration.


* This document describes the registration procedure for a protector. For the registration procedures for a protection helper and sub user, refer to Mimamori Tag app Instructions or Mimamori Tag Website Instructions. (The following images are examples of Android OS.)

- 1 Check the Mimamori Tag App service details.
- 2 Agree to [みまもりタグアプリ・みまもりタグ WEB サイト利用規約] (Mimamori Tag App and Mimamori Tag Website Terms of Use).
- 3 Enable Bluetooth and GPS. Disable battery optimization for Android 6.

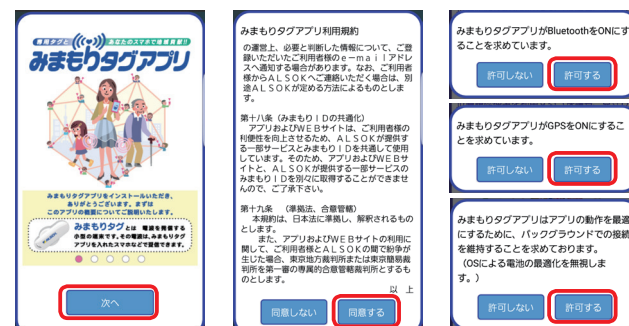


* This screen is not displayed on iOS.

 - 4 Select [位置履歴検索を利用する (保護者、見守り協力者)] (Use Location History Search (Protector and Protection Helper)).

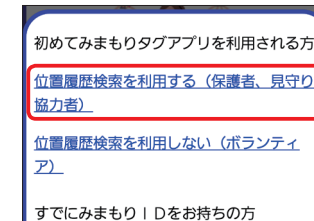

 - 6 Enter your email address to use as your Mimamori ID.

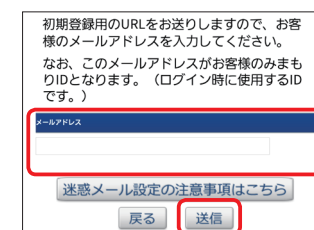

- 8 Enter each item in [保護者情報登録画面] (Protector Information Registration Screen). (The items indicated by ※ must be entered.)

- [製造番号] (Manufacturing number): If you purchased multiple Mimamori Tags or Mimamori Tag Detectors, enter any one of the manufacturing numbers.
- [初期登録番号] (Number for initial registration): 4-digit number on the application form or the contract.

保護者情報登録

※項目は必ず入力してください。

製造番号: (Continued from the left)

初期登録用暗証番号: (Continued from the left)

みまもりID: blebleals01@gmail.com

パスワード: (パスワードを2回入力してください)

秘密の質問: (パスワードを2回入力してください)

出身地: (出身地を選択してください)

秘密の質問の回答: (20文字以内)

メール設定: (メールアドレスを入力してください)

メインメールアドレス: blebleals01@gmail.com

メールアドレス2: (メールアドレスを入力してください)

メールアドレス3: (メールアドレスを入力してください)

メールアドレス4: (メールアドレスを入力してください)

メールアドレス5: (メールアドレスを入力してください)

(Continue to the right)

みまもりタグ is a registered trademark of Sohgo Security Services Co., Ltd.

Step 5 Log in and perform the tag detection test in the Mimamori Tag app.

- 1 When initial registration is completed, tap the Mimamori Tag app icon.
- 2 Select [設定] (Settings) from the menu bar of the Mimamori Tag app.



- 3 Enter your Mimamori ID and password and then tap [認証] (Authenticate). The Mimamori Tag app can be used once authentication completes.

* If authentication is successful, the display at the top of the Mimamori Tag app changes to protector mode.

ID・パスワード認証

位置検索等を利用するためには、みまもりIDおよびパスワードを入力し、認証ボタンを押す必要があります。一度認証が完了すれば、次回から認証することなく位置検索等を利用できます。みまもりIDをお持ちでない方はヘルプをご確認ください。

みまもりID: (みまもりIDを入力してください)

パスワード: (パスワードを入力してください)

認証

- 4 Tap [タグ検知テスト] (Tag Detection Test) in the settings screen. The manufacturing numbers of Mimamori Tags that are normally exchanging data will be displayed.

タグ検知テスト

*使い方はヘルプのQ&Aをご覧ください。

0009522 電池残量あり -98

0009904 電池残量あり -89

0009928 電池残量あり -78

0009409 電池残量あり -93

0009935 電池残量あり -78

0009522 電池残量あり -98

① ② ③

- ① Indicates the manufacturing number of the Mimamori Tag.
- ② Indicates whether or not there is any battery power remaining.
- ③ Indicates the strength of the received Mimamori Tag signal.